



Internet Radio WR-336F

User Manual



Please read this user manual carefully before using the receiver

Contents

1. Introduction to the WR-336F Internet Radio ...	4
2. Location of controls	6
3. Remote Controller	8
4. Choosing functions and options	9
5. Network Setup	11
6. Overview of Radio modes and functions	13
7. My Favorite	15
8. Internet Radio	16
9. Media Center	18
10. FM Radio	19
11. BT streaming	20
12. Alarm	21
13. Timer	22
14. Sleep Timer	23
15. Configuration	24
16. Skytune Web Application for Internet Radio www.skytune.net	27
17. Smart Phone, Tablet or Computer Control ...	30
18. Problems and Solutions	31
19. Technical Specifications	33

1/ Introduction to the WR-336F Internet Radio

The WR-336F Internet Radio is a compact, multi-purpose and attractive portable radio with an internal 2000 mAh Li-Ion rechargeable battery for many hours of audio entertainment and a gateway into the world of digital audio.

There are seven different operating modes requiring different wireless connections as listed below:

- 1) My Favorite (No Wi-Fi or Internet)
 - List of previously Preset favorite listening choices
- 2) Wireless Wi-Fi (Internet connected)
 - Internet Radio with more than 30 thousand radio stations worldwide
- 3) Media Center (Wi-Fi - no Internet)
 - Play music streamed over the Wi-Fi network by a UPnP or DLNA server e.g. smart phone, laptop.
- 4) Wireless (direct broadcast – no Internet)
 - FM Radio
- 5) Wireless (BT streaming – no Internet or Wi-Fi)
 - Play audio transmitted from a Bluetooth source e.g. smart phone, Laptop.
- 6) Alarm (no Wi-Fi or Internet)
 - Wake up alarm Clock with option to automatically set the Time of Day to Internet time standard

Introduction to the WR-336F Internet Radio

7) Timer (no Wi-Fi or Internet)

- Adjustable timer to delay putting the Radio into Standby mode
- Cooking Timer -To count down from a specified time with alarm

8) Configuration (no Wi-Fi or Internet)

- Set up, options and information center



Precautions

Charge the battery with a USB charger – do not apply any other power source or permanent damage to the radio will occur and may be hazardous.

To clean use only a damp cloth and dry with a clean towel - keep away from all liquids.

To avoid loss of warranty do not attempt to repair or remove the cover for any reason.



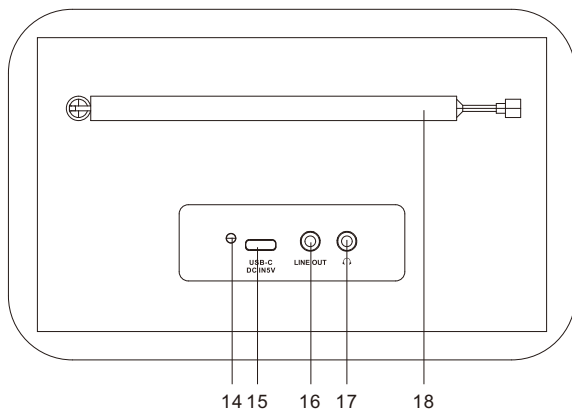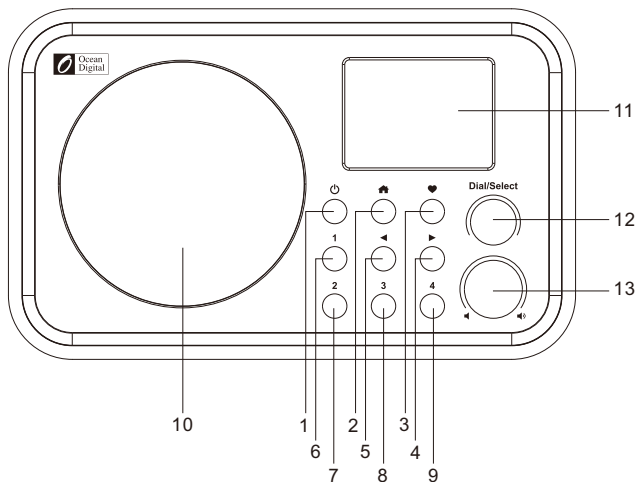













2/ Location of Controls



Location of Controls

- 1) Press and Hold – turn On/off (Press briefly to go sleep/on with USB power)
- 2) Main Menu – Go to My Favorite
- 3) Press and Hold to Preset – Add current audio source to Favorite List
Press to recall favorite list – display favorite list
- 4) Move Forward – go to next display or item in list
- 5) Move Back – go back to previous display or item
- 6) Preset 1 – play or save My Favorite list number 1
- 7) Preset 2 – play or save My Favorite list number 2
- 8) Preset 3 – play or save My Favorite list number 3
- 9) Preset 4 – play or save My Favorite list number 4
- 10) Loud Speaker – off when headphone plugged in
- 11) 2.4" TFT LCD – color display
- 12) Dial Select – rotate to navigate and press to select
- 13) Volume Control – rotate to adjust volume
- 14) LED – Red battery charging; Green fully charged
- 15) DC IN – USB supplied 5 Volt supply
- 16) 3.5 mm Line Out – stereo pre-amp level audio
- 17) 3.5 mm Headphone – stereo audio

3/ Remote Control

1.  : On/Off only when power is connected to the radio.
2.  : Turn sound Off/On
3. **0-9**: Input numbers and letters
4.  : Add current audio source to Favorite List
5.  : Display favorite list
6.  : Increase or go up lists
7.  : Go to next display or item
8.  : Go back to previous display or item
9.  : Decrease or go down lists
10. **OK** : Select currently displayed or highlighted item
11.  : Go to alarm setup
12.  : Go to sleep timer setup
13.  : Increase volume
14.  : Decrease volume
15.  : Go to My Favorite
16. **MODE** : Switch function
17. **EQ** : Go to equalizer setup
18.  : Go to last track or radio station
19.  : Stop or start audio
20.  : Go to next track or radio station
21. **LOCAL** : List local radio stations
22. **INFO**: Network and System
23. **DIMMER**: Go to dimmer setup



4/ Choosing functions and options

All user input is information that the Radio uses to provide the desired audio entertainment and pressing the Dial/Select knob a confirmation and go to command.

Once a desired selection is displayed or highlighted the selection is confirmed by pressing and releasing the Dial/Select knob.

The Dial/Select control knob is also used for navigating LCD displays and lists by rotating clockwise (CW) or counter clockwise (CCW) to change or highlight information displayed on the LCD screen.

The front panel Move Forward (►) and Move Back (◀) buttons can also be used to move to the next or back to the previous display but all Selections must be confirmed by pressing and releasing the Dial/Select knob.

Buttons labeled one through four on the front panel can be used for directly and easily selecting one of the first four audio sources in the My Favorite list with no confirmation required – just press and go.

Buttons one through 4 can also be used to save (♥) directly into one of the first four locations in the My Favorite list when a favorite audio source is playing – just press and hold the button until the Preset symbol (▾) is displayed.

Choosing functions and options

Alternatively navigate to functions (i.e. My Favorite, Internet Radio, Media Center, Bluetooth, Alarm, Sleep Timer and Configuration) or a position in a list by using the Move Forward, Move Back, Move Up and Move Down controls on the Remote Controller with the OK button confirming the selection.

Many other controls are available on the remote controller with discrete buttons for many functions e.g. volume up or down.

Throughout this manual “Select” will mean navigating through display screens or option lists to display or highlight desired selection and confirming it by pressing and releasing the Dial/Select knob or OK button on the remote controller.

5/ Network Setup

The Internet Radio must have a high bandwidth internet connection and a wireless (Wi-Fi) home network connected to it to be fully functional.

To configure the Wi-Fi network connection turn on the radio by pressing and holding the power On/Off button until the display illuminates - this normally takes 3 - 5 seconds.

The first time the Radio is turned on after leaving the factory a Configure Network wizard is automatically started:

- 1) Highlight and Select Yes to connect to the Wi-Fi network
- 2) The display will change and display a list of options – Select Add AP (Scan)
- 3) The display will show a list of available networks – Select your network
- 4) The display will ask for your passcode/password – Use the **[Dial/Select]** knob to scroll through the characters, highlight it and press **[▶]** button to confirm and input the next character. When it comes to the last character of the password , press and hold **[Dial/Select]** to confirm and complete the entry.
- 5) If the connection is successful “Association Complete” will be displayed briefly.


To repeat the above procedure, or if Configure Network wizard does not automatically start, the network can be connected by using the Configuration mode.

Network Setup

- 1) Press the Menu button to go to the mode selection options
- 2) Select Configuration
- 3) Select Network

There are two different options to connect to the network from the Configuration mode:

- 1) Repeat steps 1) through 5) above.
- 2) Select Add AP (WPS button) – Press WPS button on your router within 2 minutes to complete the connection.

Connection status is displayed in the top left hand corner of the LCD with the Wi-Fi symbol and signal strength bars ().


For best Wi-Fi performance, limit “drop outs” (interruptions) the Wi-Fi Channels must be set according to the location of the Radio e.g. China, USA, Europe. The factory default is China.


To set the correct location, select Configuration>Network>Wi-Fi Channels and select the correct option.

Watch the setup demo by scanning the QR code below:



6/ Overview of Radio modes and functions

To Select any mode use the Menu button () on the radio or remote controller to display the My Favorite screen:

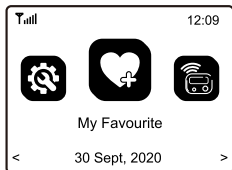

Navigate through the modes to find and Select any of these functions:


- 1) My Favorite – A maximum of 150 previously saved (Preset) favorite listening sources are listed for Selection.
- 2) Internet Radio - Select online radio station from the thousands available on Skytune or by using the History list of previously selected radio stations or use Search to find a preferred radio station.
- 3) Media Center – Browse and Select music streaming on your home Wi-Fi network by any UPnP or DLNA compatible server e.g. Smart phone, Tablet, PC, Laptop.
- 4) FM Radio – Play your favorite local radio station using the telescopic antenna
- 5) BT streaming – When “Paired” (connected) to another Bluetooth device use the Radio as a powered speaker. Maximum range of the Bluetooth


Overview of Radio modes and functions

wireless signal is 10 meters (32 feet) but may be reduced by the presence of walls or other obstructions.


- 6) Alarm – two separate alarm clocks with the time of day automatically synchronized to the internet time standard. Only available if the radio is connected to a USB charger.
- 7) Timer – To count down from a specified time with alarm
- 8) Sleep Timer – Select a time delay before the Radio goes to Standby mode while playing your selected audio entertainment source. Only available if the radio is connected to a USB charger.
- 9) Configuration – This mode lists all available options and settings to personalize your Radio.

7/ My Favorite

This mode displays a list of up to a maximum of 150 audio sources that have been Preset (stored) using the Preset buttons 1 – 4 on the front panel of the radio or Preset button on the remote controller () while an audio source is playing.

Press and hold button until the Preset symbol () is displayed in the top left corner of the LCD.

After the first 150 presets the next Preset will be stored in the first location, the next in the second location; continuing to overwrite each list location until it loops back to the first location again.




To Edit the list highlight a list item then press the Move Forward button () to move to the Edit list function where the item can be moved Up, Down or Deleted from the list.

8/ Internet Radio


Select Internet Radio mode (Menu > My Favorite > Internet Radio) and navigate the extensive list of worldwide radio stations using these options:


- 1) Skytune – Select a radio station using the structured lists that aid and reduce the task of finding the right station.
- 2) Use Search instead of browsing the extensive radio station list by using the initial letters of the desired station name, creating a shorter list of stations the more characters used in the search.
- 3) The History option will show a list of the radios stations recently selected. Every station selected is added to the list automatically until a maximum of 150 is reached when the next station selected will replace the first station in the list.

When playing Internet stations information about the station and what is playing will be displayed on the LCD screen. Pressing the Move Forward button once will display more information and pressing Move Forward again will display the time of day in 12 or 24 hour format depending on the time setup in Configuration.

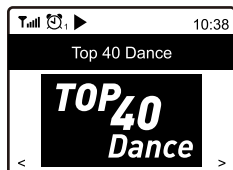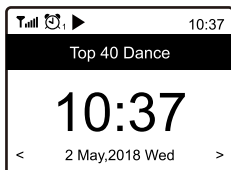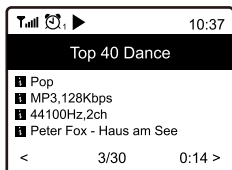

Internet Radio

Radio Stations can be added to the My Favorite list at anytime a station is playing by pressing and holding. Preset () button until the Preset symbol is displayed in the top left hand corner of the LCD as shown below.

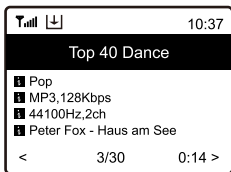

A maximum of 150 Presets can be put in the list before the next Preset will overwrite the first item in the list.


To edit My Favorite list highlight a Preset location and press Move Forward to display edit options; Move Up, Move Down and Delete.

9/ Media Center

The Radio supports the industry standard Universal Plug and Play (UPnP) and Digital Living Network Alliance (DLNA) standards.


This enables the Radio to browse and play music files located on an UPnP or DLNA server provided the server has been setup to allow sharing of files on the network.

Set up Media Center playback options in Configuration and Select the Media Center to display a list of options:

- 1) UPnP – A scan is made to find UPnP and DLNA devices that are streaming on the Wi-Fi network (this can take a few seconds) and when complete options are listed to select music or playlists files. If no UPnP or DLNA servers are found “Empty List” is displayed.
- 2) My Playlist – Your own play list may be created by playing selected music and while it is playing pressing and holding a Preset button until the Preset symbol () is displayed.
- 3) Clear My Playlist – Select to delete all music files from My Playlist.

10/ FM Radio


Select FM Radio and press OK if option to Scan and Preset FM Stations is displayed or if a list of Preset FM stations is displayed highlight and select station to start listening.

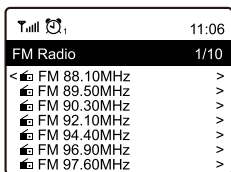

While a station is playing it can be added to the Favorite list by pressing a Preset button (♥) or to display more radio station information use the Forward button (►). Note: Changes to the available FM stations will not be automatically included in the available station list without a new scan for stations. To rescan go to Configuration > FM Setup > FM Full Scan.

For manual tune on the FM radio, press the Dial/Select knob until "Tuning" is displayed in the lower right corner of the LCD screen. Pressing and releasing the Forward (►) or Back (◀) button or tune the Dial/Select knob can be used to go up or down in frequency in small steps (0.1 MHz).

To exit manual tuning long press Dial/Select knob.

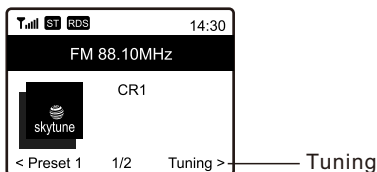

11/ BT streaming

After selecting BT streaming the display will show the Radio's Bluetooth identifier code and connection status. If it is not connected "pairing" must take place with the audio source Bluetooth device.

When the Radio's identification code appears in the list of local Bluetooth devices on the audio source Bluetooth device pair the two devices so that they can recognize each other and will automatically connect whenever the Radio is in Bluetooth mode and in range.

Once pairing is complete the audio file being transmitted by the Bluetooth device will be received by the Radio and played the same as any other audio source.

12/ Alarm

To save battery power the Alarm function is not available unless the radio is connected to the USB charging power source via the USB cable.


There are two separate wake up alarms that can be set up independently to start at a given time, with selectable sounds, at adjustable volume and with repeat options, on their own or at the same time e.g. set Alarm 1 for normal wake time and Alarm 2 to wake in case of falling asleep again .

Select Alarm 1 or 2 and a setup wizard will start to guide selecting options.

The wake sounds selected can be a tone or a source in the My Favorites list.



After selecting the final option or adjustment exit the set up wizard by using the Move Back button.

Set the wake sound volume before sleeping using volume control knob on the front panel or the volume Up / Down controls on the remote.

After setting up the Alarm check to confirm it is set by the presence of the alarm icon () at the top, left side of the display.

The Alarm will function while the radio is On or in Standby mode if USB power is connected.

13/Timer

Press the  button or the button  on the remote control and use the rotary knob **[Dial/Select]** or the arrow buttons to select "TIMER".

Setting the Timer

The device offers the Timer function as a kitchen timer. The time will count down from a specified time and ends with a beeping sound. Timer settings is up to 99 hours, 59 minutes, 59 seconds.

The beeping sound volume and sound duration is adjustable from the Timer settings in Configuration menu.

Switching off the timer

When the alarm sounds, you can turn it off by pressing the Dial/Select knob or OK button on the remote control.

In case the device is switched to other menu rather than the Timer display when the alarm sounds, return to the Timer display in order to switch off the alarm.

14/ Sleep Timer

To save battery power the Sleep Timer function is not available unless the radio is connected to the USB charging power source via the USB cable.

Set a time delay before the Radio automatically goes to Standby mode allowing the listening of audio entertainment while falling asleep.

After selecting the Sleep Timer a list of delay times will be displayed – select the appropriate time and use Move Back to exit setup.

15/ Configuration

Select Configuration for a list of adjustments and options to be displayed, navigate the list and select the desired function, use the Move Forward / Back (► / ◀) controls to go forward or backwards in the decision tree to make selection.

Network

Wi-Fi Network

- Network Options – Select if the Radio should be permanently connected or to disconnect if the connection is not active for more than 30 seconds.

- Wi-Fi Channels – Select your location to minimize interruption (drop outs) of the audio stream e.g. music.

- Wi-Fi Network
 - Add/Remove AP – Scan local area to find and list available Wi-Fi networks
 - AP:[] – If there is more than one router on the network select the one for the Radio to use.
 - Signal – Display Wi-Fi signal strength
 - IP [current setting] – Factory Reset default is Dynamic
 - DNS [current setting] - Factory Reset default is Dynamic

Date & Time

Set up and select options for time zone, clock and date formats, adjust for day light saving time, network time, NTP server address.

Configuration

You can also set clock style with choices between analog or digital clock display.

Language

Select language

FM Setup

Options to select FM area, scan for FM stations to create station list and display station list

Local Radio (United States)

Option to automatically set local stations or set manually

Playback Setup

Options to repeat all, repeat one, shuffle or normal

Resume play options

play when ready or do not start playing

Dimmer

options to set LCD brightness levels in play and Standby – set Dim and Bright light levels independently from dark to full brightness

EQ [current setting]

options for playback sound e.g. Flat, Rock, Classical

Buffer Time [current setting]

select either a 2 or 5 second buffer (storage) of streaming audio to overcome short breaks in the Internet data stream

Configuration

Line out gain

To set the line out follow headphone or choose different gain.

Cooking timer

This is to set the alarm sound volume and the duration for the Timer function.

Information

Network and System information

Software Update

Request an update to the system software


Reset to default

reset all the Radio settings and options back to the exit factory condition

16/ Skytune Web Application for Internet Radio www.skytune.net

Browse / Search

On the opening page click Browse / Search at the lower right side of the page.

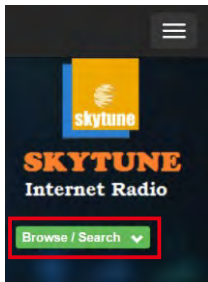

Enter the name of a Radio Station or Browse the structured list of stations available, select the one of interest and click on the heart symbol (♥) - the station logo is displayed.

Result for Searching 'dance'



1.fm 90's
Dance



1.fm Dance
One



101.RU - Club
Dance



101.RU -
Russian Dance



The Radio connection page will ask if the station is to be played or saved in My Favorite list in your Radio.

Skytune Web Application for Internet Radio

www.skytune.net

To make an Internet connection to the Radio it's IP address must be entered in the space provided on the web page – the Radio IP can be found at Configuration>Information>Network Information.

Add Favourite / Listen to Station ✕

Which operation do you want to apply to the station ?

1.fm Dance One

- Add station to my radio device favourite
- Listen to station on my radio device

Please enter your radio device's IP below.

192 . 168 . 1 . 11

Send

Close

Once the IP address has been entered select Save or Listen, click Send and My Favorite web page will be displayed i.e. a duplicate of your Radio My Favorite list.

The list can be edited using the tools provided on the web page and any changes sent to the Radio My Favorite list automatically.

Request to add Radio Station

If you know the name of a Radio Station but it is not in the list a request can be made to have it added.

On the opening page select the Suggest Station tab and fill in the application.

Adding a Radio Station

To add a Radio Station its name and URL can be entered in the Add Channel section along with selecting the Country where it is located and Genre of audio entertainment it provides.

17/ Smart Phone, Tablet or Computer Control

With device connected to the same Wi-Fi network as the Radio use web browser to edit lists and add radio stations.

Enter the Radio IP address as web address and a window will open to edit lists e.g. add your favorite radio station URL (must be the audio stream URL) if it is not in the list.

The IP address is displayed alternately on the top right corner among other status information.
(or locate it under Configuration>Information>Network information to find IP address).

18/ Problems and Solutions

Cannot connect to the Wi-Fi Network

a) Common Causes

- Incorrect passcode / password for the selected Network.
- Location of the Radio has a weak Wi-Fi signal – if possible check with another Wi-Fi connected device in the same location or move to a location closer to the router.

b) Unusual Causes

- Incorrect Network security encryption – Radio supports WEP, WPA and WPA 2

Cannot play UPnP or DLNA Files

- There is no UPnP or DLNA server.
- The UPnP server is not streaming files over the Wi-Fi Network.
- The server is not correctly configured to allow sharing of files over the network

Internet Radio has interruptions (drop outs)

- Wi-Fi Channel interference – incorrect region selected
Configuration>Network>Wi-Fi Channels.
- Weak Wi-Fi signal – check the Wi-Fi symbol (top left hand side of LCD display) for a minimum of two “Bars” - add a Wi-Fi Extender to the Network if necessary.
- Buffer set to 2 seconds (factory default) – set for 5

Problems and Solutions

seconds in Configuration>Buffer time [current selection] to bridge short gaps in the internet data stream.



- Radio Station has interrupted streaming – check by trying a stations in the Skytune> Globe Most Popular list.
- The Internet connection does not have sufficient bandwidth (capacity) to support all the devices connected to the Network when operating at the same time or is experiencing excessive error rates – have the Internet connection checked by the ISP (Internet Service Provider).

Internet Radio cannot play some stations

- The station may not be streaming – not all stations stream for 24 hours a day.
- There are too many users at this time – some stations have a limited number of users they can support at any given time.
- The station link is out of date – it is updated daily and should be correct the next day.
- The station link is no longer active – the station is no longer available.

Radio got freeze or no response

Carry out a reset as follow:

On the radio unit, press the "  " and "  " buttons together until the radio is off (screen is black), then release both buttons.

19/ Technical Specifications

Model: WR-336F

DC Power Input: 5 Volts 1 Amp. (USB)

Battery: Li-Ion 2000 mAh

Wi-Fi Wireless Network: IEEE 802.11b/g/n (5 GHz only
version ac – not supported)

FM Radio Frequency: 87.5 – 108 MHz

Frequency: 2.4 GHz

Security: WEP, WPA, WPA2

Bluetooth Version: V4.2 BR, EDR Compliant

Frequency: 2.4 GHz

Range: 32 Feet (10 meters) Line of sight

Transmit Power: 0 dBm Receive only

(not for headphones)

Audio File Streaming Formats

UPnP: MP3, AAC, AAC+, WAV, FLAC

DLNA: MP3, AAC, AAC+

Audio Output: 3 Watts

Analogue: 3.5 mm Stereo Headphone

3.5 mm Stereo Line Out

Dimension: 7.5" x 5" x 4.5"

Weight: 1.6 Lbs

In the box

- * Internet Radio
- * User Manual
- * Remote Controller (2 x AAA battery not included)
- * USB-C Cable

WEEE and Recycling



The European laws do not allow any more the disposal of old or defective electric or electronic devices with the household waste. Return your product to a municipal collection point for recycling to dispose of it. This system is financed by the industry and ensures environmentally responsible disposal and the recycling of valuable raw materials.

Ocean Digital Technology Ltd.
Flat B, 12/F., Yeung Yiu Chung (No.8) Ind. Bldg.,
20 Wang Hoi Road, Kowloon Bay,
Hong Kong
Email: support@oceandigital.com.hk

FCC

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.